


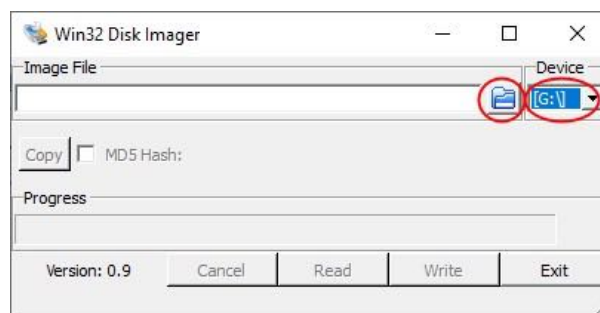
 
UPDATE DETECTALIA D7X WITH MICROSD CARD

STEP 1 - CREATE MICROSD CARD



1. Insert the microSD card in a slot of your PC with an SD card adapter.



2. Run **Win32DiskImager.exe** on PC, it will pop-up the following window, click to select the proper device, then click button  to select ISO file.



3. After selecting the file, click bottom **Write**, then click button **Yes** of the pop-up window, it will write the file to MicroSD card automatically. Please note that all data will be erased from the MicroSD card.

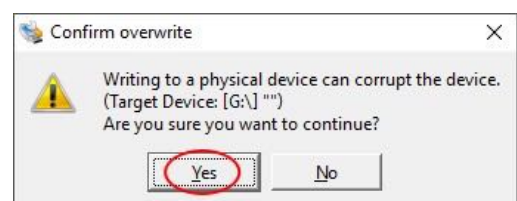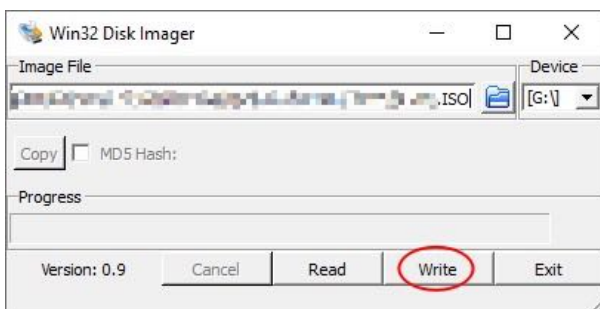

4. If process is complete you will see this image.




STEP 2 - UPDATE WITH MICROSD CARD

1. Switch off the power of your detector.
2. Insert the MicroSD card into the SD card slot at the rear side of the machine.



3. Press and hold ON/OFF button and MODE button to turn on the machine, the machine display will show you this:

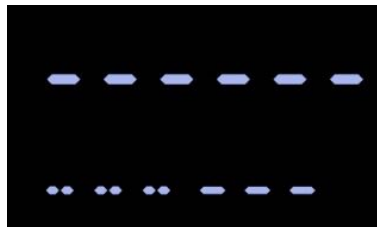

4. After software update finished, the machine will beep 2 times and automatically turn off.
5. Remove the MicroSD card from the detector.