



INSTRUCTIONS TO UPDATE DETECTALIA D7X

1. Unzip the file into a folder on your PC desktop
2. Install the driver PL2303_Prolific_DriverInstaller.exe on your PC and restart your PC
3. Disable your computer's antivirus
4. Turn off your Detectalia D7X
5. Connect Detectalia D7X to your PC via upgrade cable
6. Connect the power adapter to the Detectalia D7X
7. Hold down the MODE button, and without releasing it, press the ON / OFF button.
Signs - will appear on the screen (this indicates that the device is in download mode.
If these signs do not appear, retry step 7
8. Release the MODE button
9. Launch the software Detectalia Update Software.exe

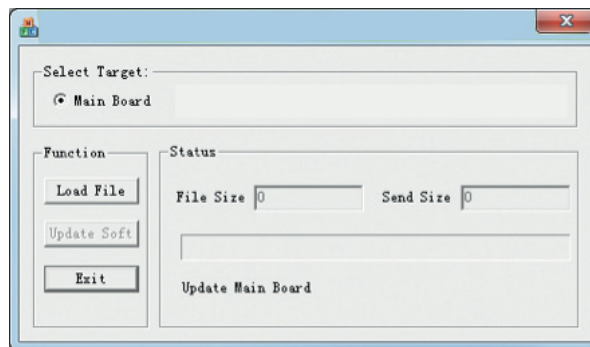

10. Click on Load File
11. Select in the folder where you have unzipped the software the file named ending .UPL
12. Click Upload Soft

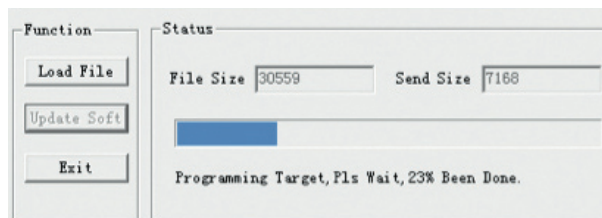

13. If the charge is 100%, the appliance will turn off automatically
14. Click the EXIT button to close the program
15. Your device has been updated. You can now reactivate your antivirus